

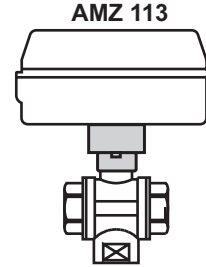


Danfoss

Instruction ON/ OFF Zone valve AMZ 112 & AMZ 113


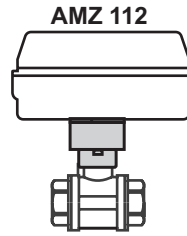


Installation AMZ 112.

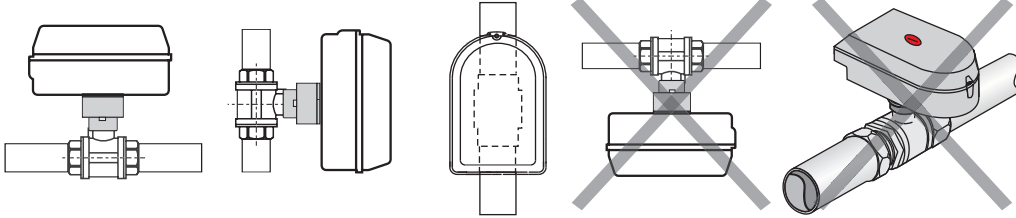



Installation AMZ 113.

! FORBIDDEN !

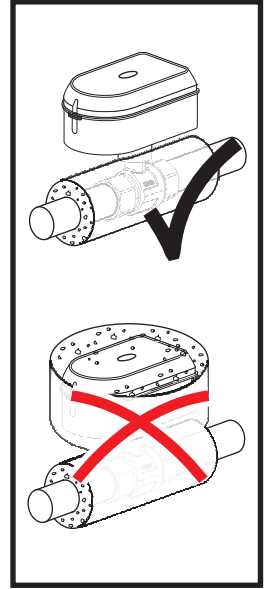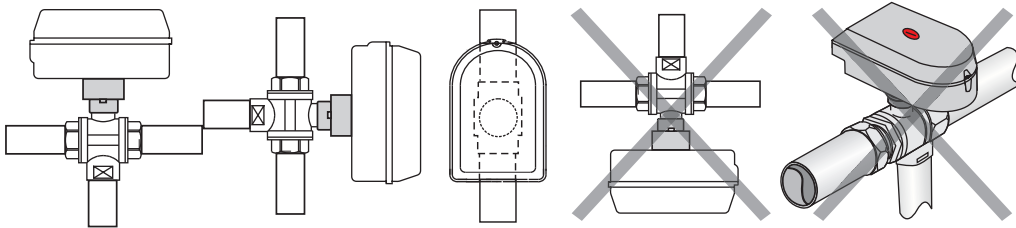

Manual control - AMZ 112



MANUAL

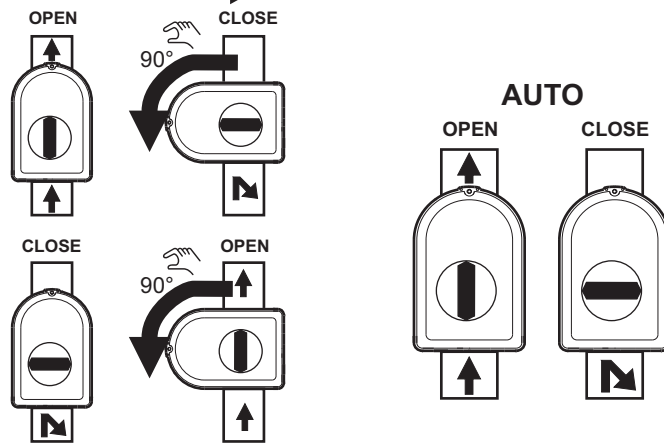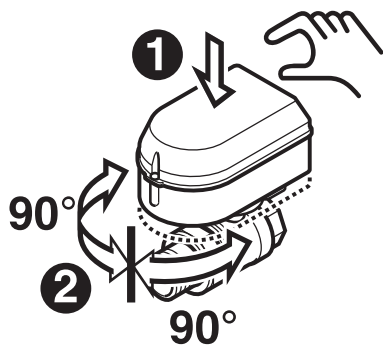


Manual control - AMZ 113

MANUAL


AUTO

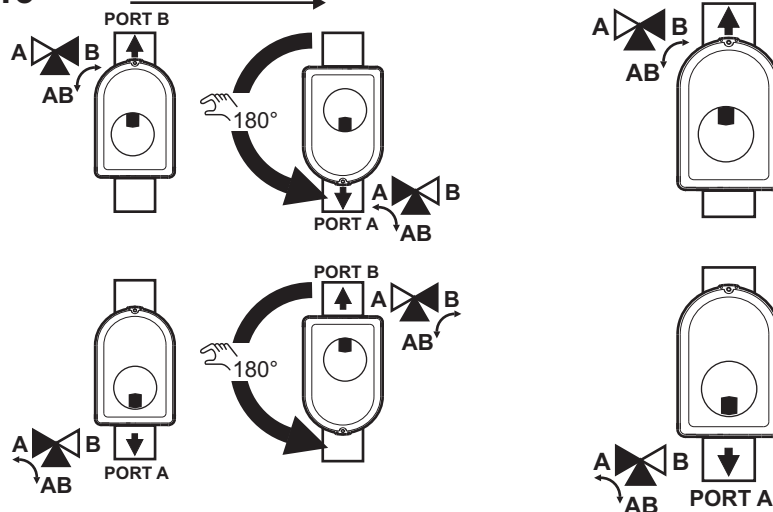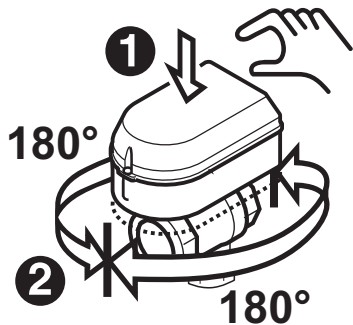


AMZ 112 / 113 SPST switch

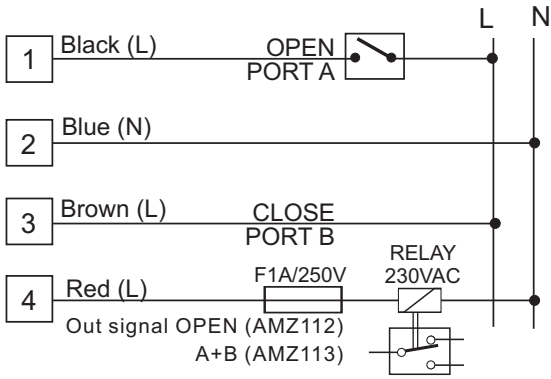


AMZ 112 / 113 SPDT switch

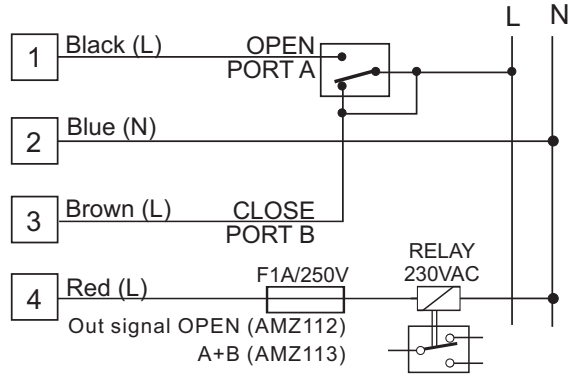


Room thermostat RET 230 + AMZ 112/113

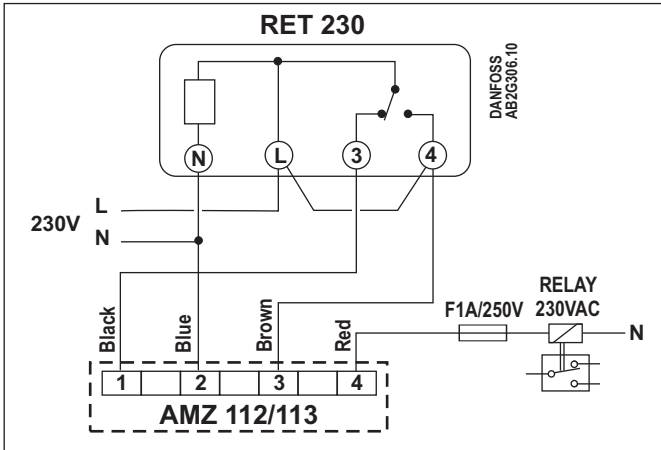


Programmable Room Thermostat TP5000 + AMZ 112/113

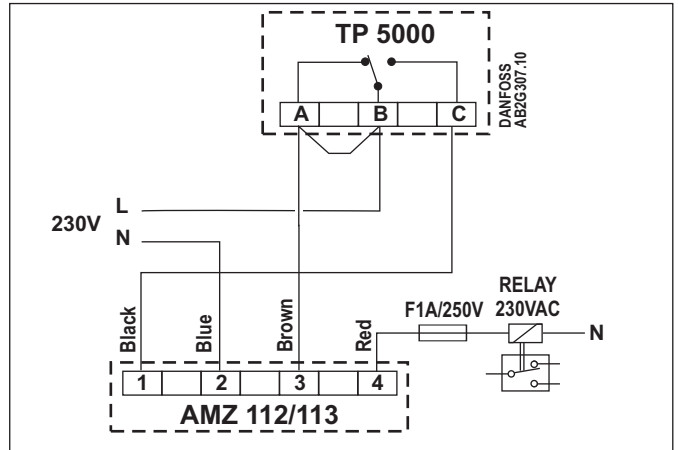


Programmable Room Thermostat TP7000 + AMZ 112/113

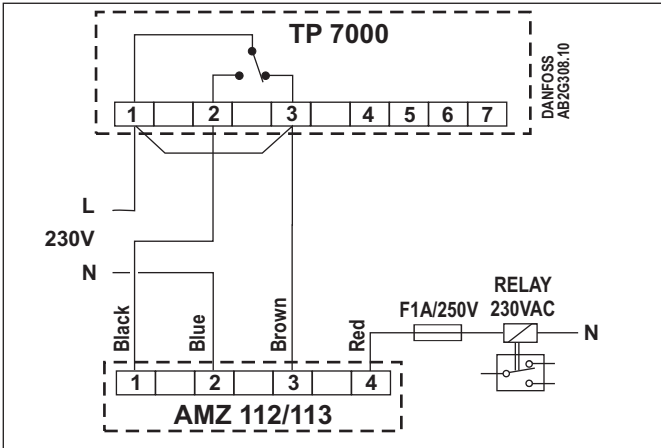

Programmable Room Thermostat TP7000M + AMZ 112/113

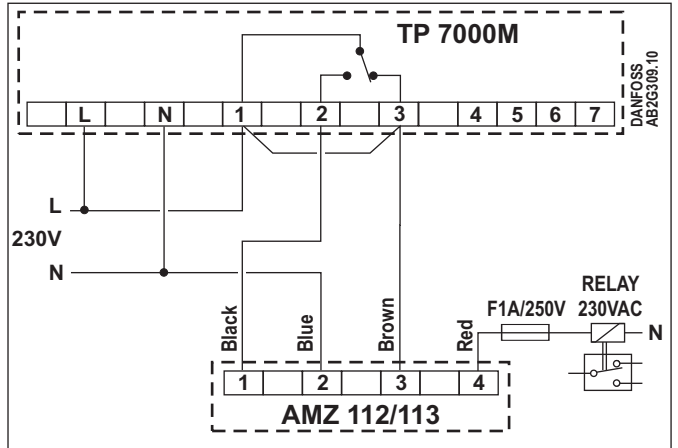

Thermostat KP-RT with a switch contact + AMZ 112/113

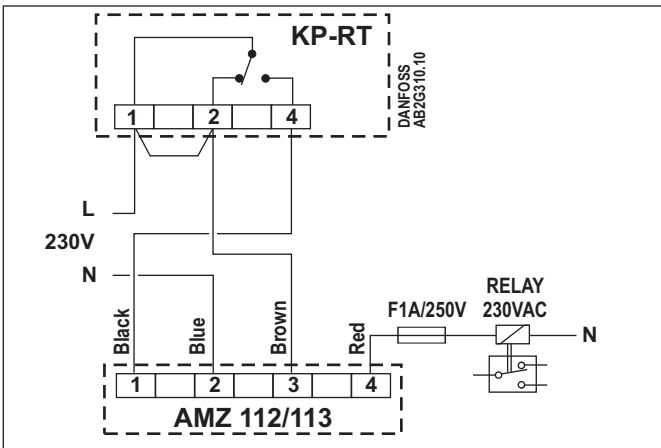

Switch contact + AMZ 112/113

